

# Loboy Sweeper Fenders

*Loboy Sweeper Fenders are about 5" longer than stock Heritage fenders.*

We took our popular Street Sweeper series, cut them down 3" and flared out the tails a bit to create our popular Loboy Sweepers. This gives you a swoopy dramatic look with more ground clearance. No more bottoming out going over speed bumps or backing into curbs.

Our composite fenders are all made at our facility in Upstate New York with all 100% USA made raw materials. Composite glass techniques make our fenders lightweight, yet very strong. The top of the rear fenders have been structurally tested to withstand 28,000 PSI, that is stronger than your OEM steel fender. Fenders do not come pre-drilled so you can profile your seat for an exact fit and desired look. We do not guarantee any paint jobs and do not accept fenders back that have holes drilled in them. [See Fender Mounting Tips](#)



**Softail Rear:**



**Part # 8655**

7 1/4" Softail Pre 1996

\$339.00 [Click Here to Order](#)

**Part # 8726**

7 1/8" Softail 1996-2011

\$339.00 [Click Here to Order](#)

**Part # 8726F**

7 1/8" Softail 1996-2011 Frenched

\$339.00 [Click Here to Order](#)

**Part # 8778**

9 1/4" Softail w/ 200 series tire

\$339.00 [Click Here to Order](#)

**Part # 8778F**

9 1/4" Softail w/ 200 series tire Frenched

\$339.00 [Click Here to Order](#)

## Universal Rear:



**Part # 8655**

7.25" Universal Rear

\$339.00 [Click Here to Order](#)

**Part # 8672**

7.25" Frenched

\$339.00 [Click Here to Order](#)

**Part # 8656**

8.25" Universal Rear

\$339.00 [Click Here to Order](#)

**Part # 8673**

8.25" Frenched

\$339.00 [Click Here to Order](#)

**Part # 8656W**

9" Universal Rear

\$339.00 [Click Here to Order](#)

**Part # 8674**

9" Frenched

\$339.00 [Click Here to Order](#)

## FLHT Touring Rear:



**Part # 8655**


7 1/4" Pre 1997

\$339.00 [Click Here to Order](#)

**Part # 8719**

7 1/4" 1997-2008

\$339.00 [Click Here to Order](#)

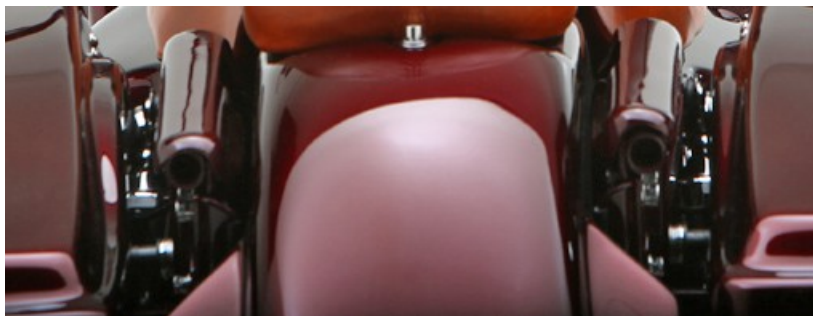

In order to run one of our custom rear Bagger style fenders you must remove the license plate bar. You will have to cut it off just after the rear fender rails. We will be glad to send you, at no charge, black plugs to fill the holes. When running detachables, you may have to space out your dzus receptacles brackets approx. 3/8" with washers for bag lid clearance.

## Sportster Rear:





**Part # 8655XL**

Pre 04 XL Models

\$339.00 [Click Here to Order](#)

**Part # 8746**

8" 2004+ XL Models

\$339.00 [Click Here to Order](#)



## Dyna Rear:



**Part # 8736**

8" Dyna Models 2002+

\$339.00 [Click Here to Order](#)

## Loboy Sweeper Front Fenders



Part # 8712

**Part # 8712**

4.5" Mounting tab to tab Narrow Glide (or wide glide with spacers) Front Fender for 21" wheel/tire combination (80/90-21)

\$239.00 [Click Here to Order](#)

**Part # 8712A**

5.5" Mounting tab to tab Narrow Glide (or wide glide with spacers) Front Fender for 21" wheel/tire combination (120/70-21)

\$239.00 [Click Here to Order](#)

**Part # 8713**



Part # 8713



Part # 8654

4.75" Mounting tab to tab Narrow Glide Front Fender found on Sportster, Dyna, Early FX Models with 19" (100/90-19) Tires  
\$239.00 [Click Here to Order](#)

**Part # 8654**

6.5" Mounting tab to tab Wide Glide Front Fender found on Softails and other models with 16" 18" or 19" low profile Tires  
\$239.00 [Click Here to Order](#)

[Click Here for Fender Installation Instructions](#)

